

WIRELESS WALL DIMMER • LSRMH

OPERATING INSTRUCTIONS



Batteries not included.
Requires 2 - AAA.

	<p>ON Turn ON OFF Turn OFF</p> <p>Hand held remote controller cannot be used directly as a switch, it should be used together with the switch.</p>
	<p>Turn off the light to save the current color temperature then turn on the light, the last saved color temperature will be displayed by default.</p>
	<p>MATCHING CODE FOR LIGHT Holding the 'ID' button will keep the controller's indicator on, then turn on the light and release the 'ID' button after the light flashes, matching code complete. Matching code for several lights simultaneously is available.</p>
	<p>RELEASE THE CODE AND DISCONNECT LIGHT FROM REMOTE CONTROLLER Press the bottom ID + ▼ together, then turn on the light, the light will flash to finish releasing the code on the lights.</p>
	<p>GROUP SELECTING BUTTON Grouping lights (matching code process needs to be completed first). Turn off the lights, continue pressing the group selection button for 3s, then turn on the lights the lights will flash to finish grouping.</p>
	<p>SAVE BUTTON Press and hold (3-5 seconds) the "SAVE" button until the light goes out, the current brightness and color temperature are automatically saved. Turn off lights then turn on, the last saved brightness and color temperature will be displayed by default.</p>
	<p>ALL GROUPS ARE SELECTED</p>

COLOR TEMPERATURE AND BRIGHTNESS SELECTION			
Color Temperature			
Brightness			
 Increase Brightness	 Decrease Brightness	 Decrease Color Temperature	 Increase Color Temperature

Power the light off then power it on, the last saved brightness (which is saved by the button "SAVE") and the last saved color temperature (which is saved by the button "SAVE" or "OFF") will be displayed by default. The defaulted factory setting of the light is 100% brightness and 4000K.